




1666/1666E 2-6-2 1938-1942

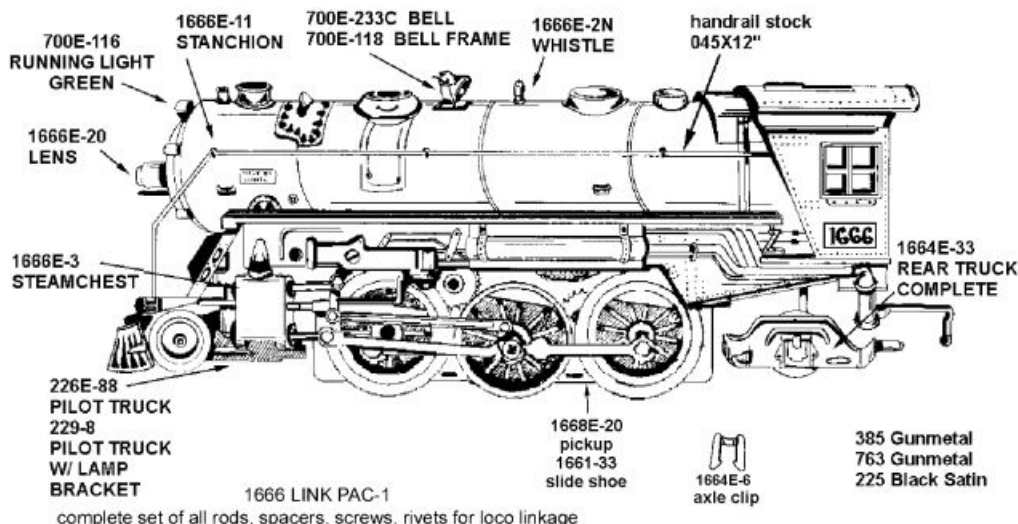

1689T TENDER 2689T WITH BOX COUPLER

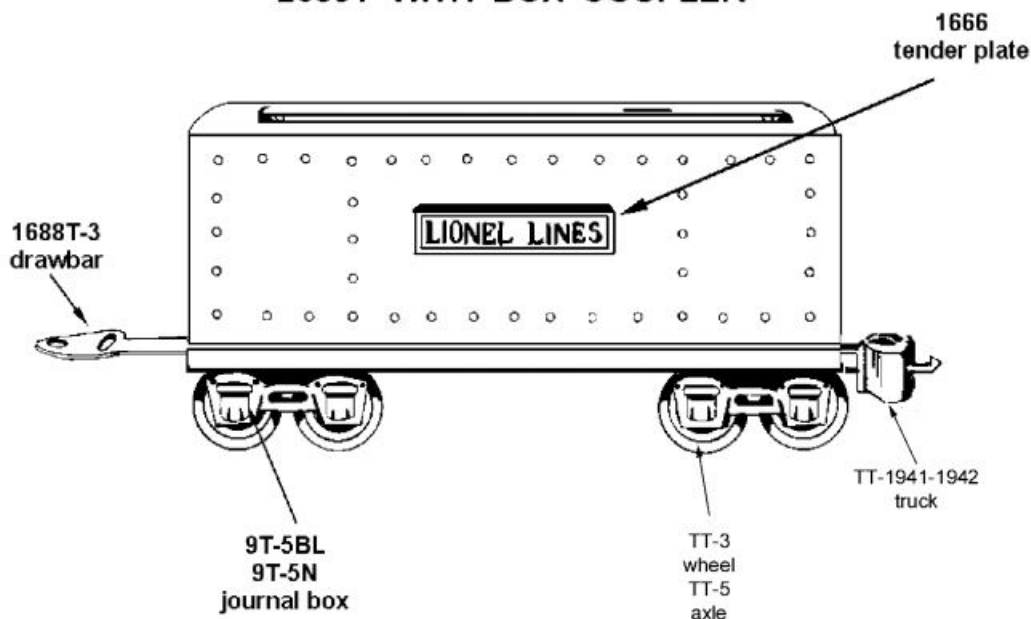


1666-1666E LOCO LINKAGE

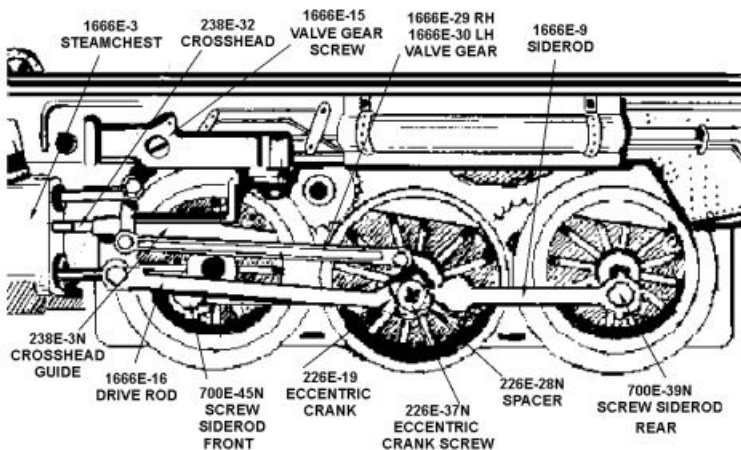

1666 LINK PAC-1

complete set of all rods, spacers, screws, rivets for loco linkage

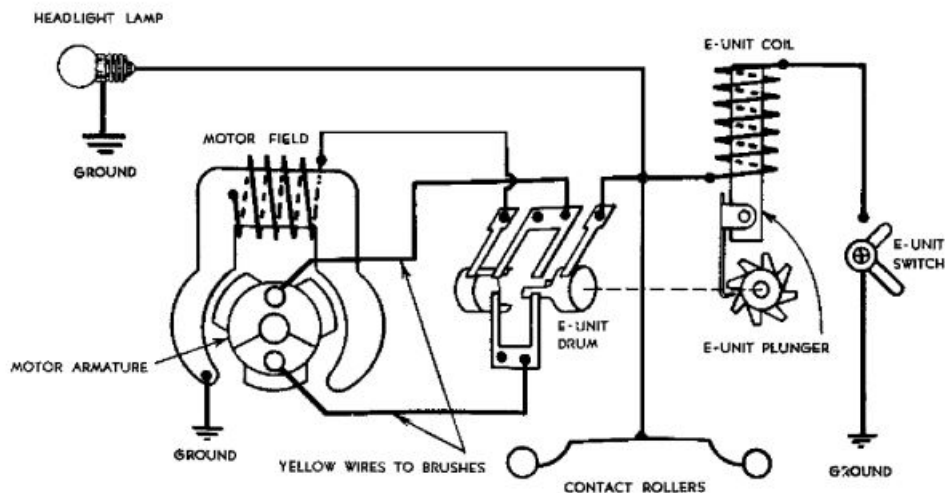

"O-27" TENDERS**No. 1688T - 1688W - 1689T - 1689W - 2689T - 2689W**

PRICE	PART No.	DESCRIPTION	LOCATION
\$.85	1688T-6	Body	
.20	CP-12	Coupler, Manual--Used on 1688T, 1689W	
.20	1688T-8	Coupler, Manual	
.10	1688T-3	Used on 1688T, 1688W	
.55	1688T-9	Drawbar	
		Frame	
		Used on 1689T, 1689W	
.45	1689W-3	Frame	
		Used on 1689T	
.65	2689W-2	Frame	
		Used on 1689W, 2689W, 2689WX	
.65	2689T-3	Frame	
		Used on 2689T, 2689TX	

"O27" LOCOMOTIVES

No. 1666 - 1666E - 1668 - 1668E

PRICE	1666-1666E	1668-1668E	DESCRIPTION	LOCATION
BOILER AND CAB COMPLETE AND PARTS				
\$.25	700E-333N		Bell	
.10	700E-118		Bell Frame	
2.50	1666E-35		Boiler and Cab Complete	
2.00		1668E-35	Boiler and Cab Complete	
.15		1668E-5	Bracket and Stud Assembly	
.20	1666E-37		Drawbar Assembly	
.10		289E-10	Drawbar Coupler	
.15	1666E-10		Handrail	
.10		1668E-7	Handrail	
.05		752-15	Headlight Disc	
.10	1666E-20		Headlight Lens	
.15		250E-56	Lamp Assembly	
.10	78-73		Lamp Socket	
.75	1666E-3		Pilot and Steamchest	
.05	700E-166		Running Light	
.10		249E-1	Running Light	
.10		250E-35N	Sand Dome	
.10		238E-20	Smokestack	
.02	1666E-11	250E-33N	Stanchion	
.10	1666E-2N		Whistle	
DRIVE ACTION PARTS				
.15	238E-32		Crosshead	
.10	238E-3N		Crosshead Guide	
.05	238E-23N	238E-23N	Crosshead Screw	
.10	1666E-16		Drive Rod	
.10	228E-19		Eccentric Crank	
.10	228E-37		Eccentric Crank Screw	
.25	1666E-29		Eccentric Rod Assembly, R.H.	
.25	1666E-30		Eccentric Rod Assembly, L.H.	
.05		257-42N	Piston Rivet	
.20		1668E-45	Piston Rod Assembly	
.10	1666E-9	1668E-9	Side Rod	
.10	700E-45N		Side Rod Screw, Front	
.10	700E-39N		Side Rod Screw, Rear	
.10	228E-26N		Spacer	
.10	228E-19		Valve Gear Screw	
PILOT TRUCK COMPLETE & PARTS				
.05	1661-8	1661-8	Axle	
.75	228-8		Pilot Truck & Lamp Bracket Assembly	
.25		1689E-26	Pilot Truck Complete	
.50	226E-88		Pilot Truck Assembly	
.02		TS-70ZP	Retaining Washer	
.05	226E-30	289E-4	Spring	
.05	226E-23		Spring Rivet	
.10	1688E-6	1661-7	Wheel	
TRAILER TRUCK COMPLETE AND PARTS				
.05	226E-21	1661-8	Axle	
.05	1666E-6		Journal Clip	
.05	1664E-19	1668E-24	Mounting Screw	
.05	226E-30		Spring	
.05	226E-23		Spring Rivet	
.50	1664E-33		Trailer Truck Complete	
.25		1689E-24	Trailer Truck Complete	
.10	1661-7	1688E-6	Wheel	

"027" MOTORS

No. 1666 - 1666E - 1668 - 1668E

PRICE	1666-1666E	1668-1668E	DESCRIPTION	LOCATION
MOTOR COMPLETE AND PARTS				
\$.85	1668E-16	1668E-16	Armature Assembly	
.10	1668E-16	1668E-16	Armature Bearing Pushing	
.10	1668E-43	1668E-43	Armature Pinion	
.15	1668E-14	1668E-14	Axle Bushing	
.50	289E-23	289E-23	Brush Plate Assembly	
pr. .35	1661E-29	1661E-29	Brushes	
pr. .10	1661E-30	1661E-30	Brush Springs	
.60	1668E-20	1668E-20	Contact Shoe Complete	
2.00	1668E-36	1668E-36	"E" Unit Complete	
.25	1668E-21	1668E-21	Gear Plate Assembly	
.05	262E-13	262E-13	Gear Stud	
.35	1668E-18	1668E-18	Intermediate Gear, First	
.35	1668E-19	1668E-19	Intermediate Gear, Second	
3.75	1668E-25	1668M-1	Motor Complete	
WHEELS for 1666E prior to 1939				
.30	1666E-27		Center Gear Wheel and Axle	
.20	1666E-7		Center Plain Wheel	
.30	1668E-29		End Gear Wheel and Axle	
.20	1666-5		End Plain Wheel	
WHEELS (for 1666E) 1939				
.30	1666E-43		Center Plain Wheel & Tire	
.40	1666E-44		Center Gear Wheel, Tire & Axle	
.30	1666E-45		End Plain Wheel and Tire	
.40	1666E-42		End Gear Wheel, Tire & Axle	
WHEELS (for 1668-1668E)				
.30		1668E-30	Center Gear Wheel & Axle	
.20		1668E-7	Center Plain Wheel	
.30		1668E-29	End Gear Wheel & Axle	
.20		1668E-5	End Plain Wheel	